

**External output
module**

TECHNICAL MANUAL

ERROUT-WIRE

**For FUJITSU-GENERAL
indoor units compatible
with the wired remote
controllers**

- UTB-YUB**
- UTB-YUD**
- UTY-RNN*M**
- UTY-RSN*M**


APPLICATION

ERROUTWIRE is expansion module for wire controlled indoor units, with the external outputs:

- OPERATION
- ERROR

The compliance with installation instructions provided in this documentation is necessary for ensure technical parameters and reliable operation.

All construction work associated with installing and connecting the module may be performed only by a person with qualifications in the field installation and servicing of air conditioning Fujitsu licensed to work on electrical and cooling equipment.

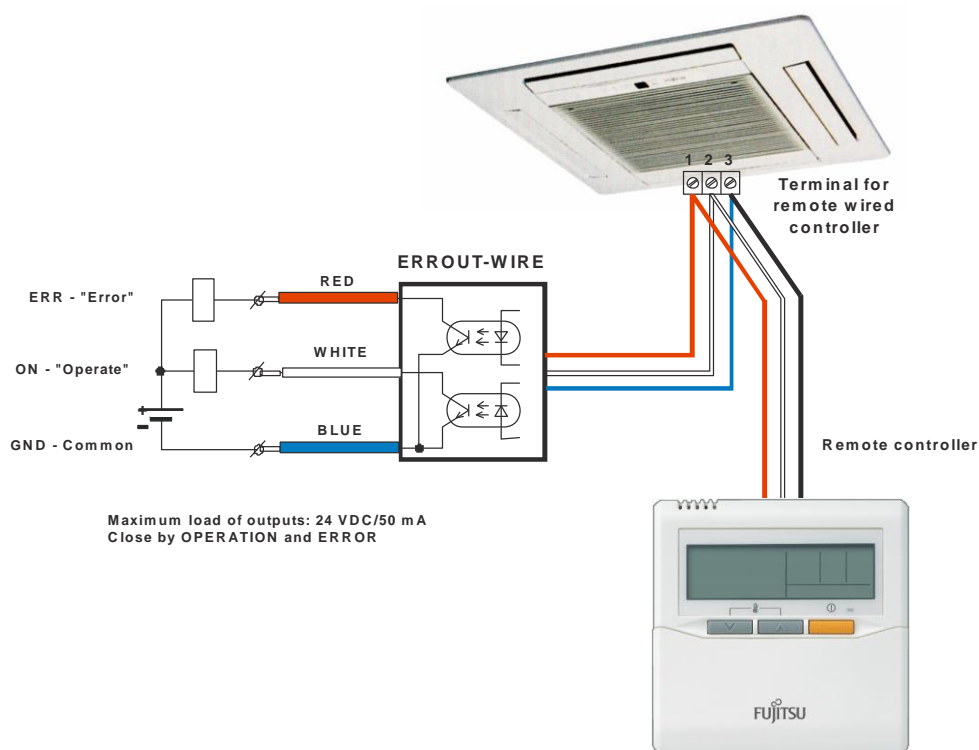

DESCRIPTION OF FUNCTIONS

Output „Operation“. Optically isolated electronic voltage-free switch with maximum load 24 VDC/50 mA. Closed indicates unit status Operation.

Output „Error. Optically isolated electronic voltage-free switch with maximum load 24 VDC/50 mA. Closed indicates unit status Error.

INSTALLATION

The module, due to small size, can be easy placed inside the indoor unit. Its 3-wired flat cable you connect to appropriate terminals for wired remote controller.